


Berry  
Residence

Customer would like to keep the landing as is with wood decking. Place composite under the edge of the landing .

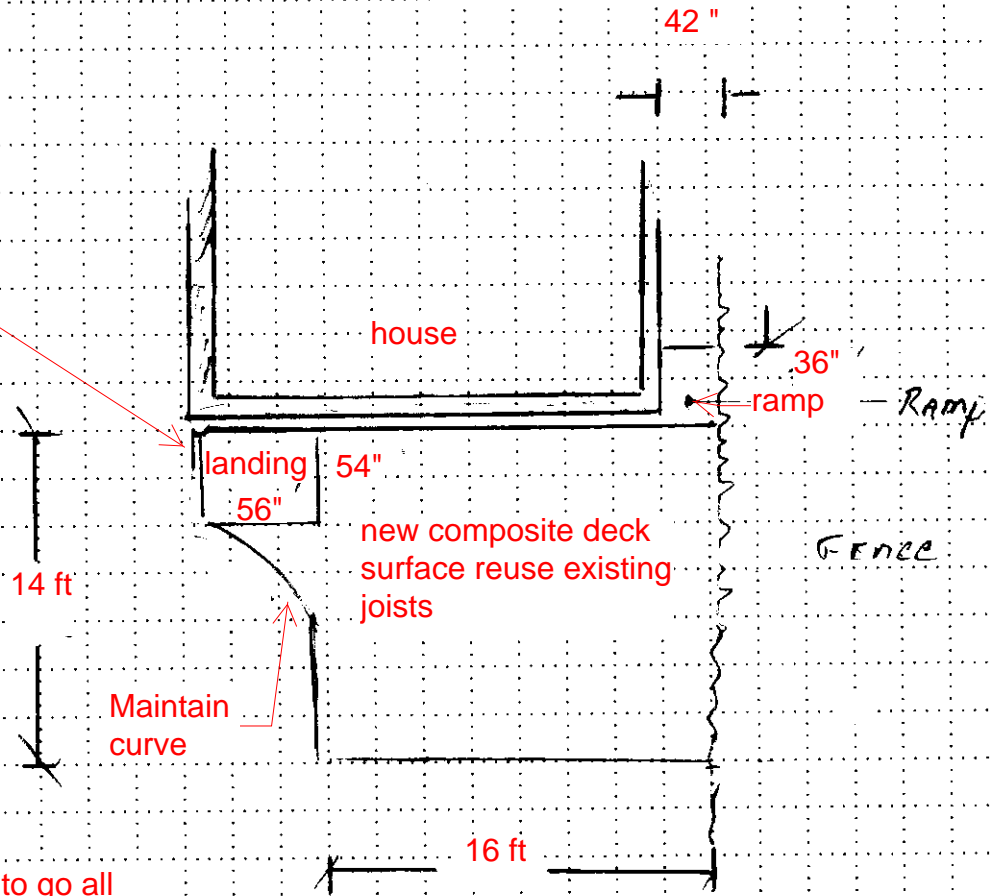

Composite does not need to go all the way under the landing.  
16 ft pieces should be long enough to go under the front edge of the landing 38/16